



XJ FRONT ADJ TRACK BAR KIT FOR 4" - 6" LIFT

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered. **This kit is for use with vehicles lifted 4-6" of lift.**

KIT CONTENTS

1-TRACK ROD BRACKET
1-ADJ TRACK ROD BODY & END

1-POLY BAG CONTAINING:
4-BUSHINGS
2-7/16" SLEEVE
2-7/16" X 2 3/4" BOLT
4-7/16" FLAT WASHERS
2-7/16" LOCK NUT
1-3/4" JAM NUT

TOOLS NEEDED

18mm Socket / Wrench
19mm Socket / Wrench
24mm Socket / Wrench



INSTALLATION INSTRUCTIONS

1. Remove the track rod from the axle using a 15mm wrench /socket.
2. Remove the cotter pin from the track rod end on the frame and remove the nut using a xx socket (frame).
3. Remove the stock track rod bracket from the drivers side of the vehicle by removing the two side nuts on the frame using a 18mm socket and the two lower bolts shown in **Photo 1** on the bottom of the frame rail using a 15mm wrench / socket. Retain the stock hardware for reuse.
4. Place the new track rod bracket in place on the studs on the side of the frame rail and tighten using a 18mm socket. **See Photo 2.**



5. Secure the bracket on the frame rail with the stock bolts on the bottom as shown in **Photo 3**. Tighten using a 15mm wrench / socket.
6. Lubricate the bushings with a lithium grease and assemble them in the track rod with the supplied 7/16" sleeve in the ends.
7. Install the track rod on the frame bracket with the supplied 7/16" x 2 3/4" bolts, washers & nut. **See Photo 4**. Do not tighten at this time.

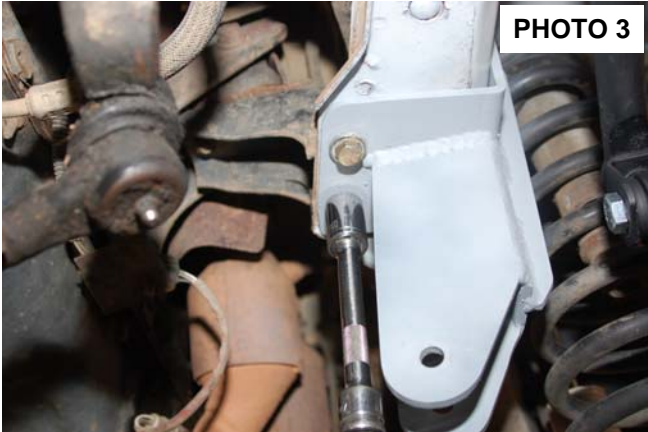


PHOTO 3



PHOTO 4

8. Make sure the body is centered over the axle and install the passenger side of the track rod on the axle with the supplied 7/16" x 2 3/4" bolt, washers & nut.
9. Tighten the axle and frame end using a 15mm wrench / socket as shown in **Photo 5**
10. Tighten jam nut using a 1 1/2" wrench.



PHOTO 5

INSTALL 7/16" X 2 3/4" BOLT, WASHER & NUT

POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.

Thank you for purchasing a Rough Country Suspension Lift Kit.

Please visit our website @ www.roughcountry.com for your off road vehicle needs

**ROUGH
COUNTRY**
SUSPENSION SYSTEMS